

ZUBIN X340 SPECIFICATIONS

IBO Rating // 340 fps

Weight // 8.00 lbs.

Width // 17.5" (Axle to Axle)

Length // 32"

Powerstroke // 13"

Draw Weight // 190 lbs.



Instruction Manual for Zubin Crossbow X-340



Zubin Outdoors LLC.
1324 Union Hill Road
Alpharetta, GA 30004

www.zubinoutdoors.com
email: info@zubinoutdoors.com

470.545.2352

THANK YOU

Thank you for purchasing a Zubin crossbow X340. Before beginning to shoot your new Zubin crossbow, please read this manual carefully. Without proper knowledge and instruction, you could cause injury to yourself or damage your Zubin crossbow.

Please call us at (470)-545-2352
with any questions about your new Zubin crossbow.

SAFETY INSTRUCTIONS FOR: ZUBIN CROSSBOW X340

1. Zubin crossbow comes with automatic safety. Never disengage the safety until you are ready to shoot and crossbow is pointed in a safe direction. Be sure to re-engage the safety if you do not shoot!
2. Treat your Zubin crossbow with the same respect as you would with any weapon. It can be dangerous and deadly if mishandled.
3. Always check your Zubin crossbow thoroughly for worn, loose, damaged or missing parts prior to shooting.
4. Never dry fire your Zubin crossbow. This can cause bodily harm, damage your Zubin crossbow and will void your warranty.
5. Do not point your Zubin crossbow at anything you do not intend to shoot.
6. Do not release the safety until you are ready to shoot.
7. Do not attempt to modify the safety or trigger mechanism in any way.
8. Do not shoot any projectile in your Zubin crossbow other than quality 22 inch long .346 inch diameter crossbow arrows with flat nock and specialized Zubin sabots designed specifically for use with your Zubin crossbow, minimum weight of 360 grain for bolts or sabots.
9. Replace the bow string as soon as it shows any significant sign of wear.
10. Before shooting, be sure the Zubin crossbow limbs will not strike a tree limb or other obstacle.
11. Inspect your arrows regularly for signs of wear, splits, dents or anything that might weaken them. Damaged arrows could break causing possible bodily injury to shooter.
12. Never place any part of your body into the path of the string or limb travel when your Zubin crossbow is cocked. Be sure that your fingers and thumb are clear of the string travel to prevent injury.
13. Visually inspect the Zubin crossbow and check for all fasteners to be sure they are tight.



**Zubin crossbow warranty is only activated
when you register your crossbow.**

Email or mail to info@zubinoutdoors

Fill out the following record for future reference:

Name: _____

Address: _____

City: _____ State: _____ Zipcode: _____

Phone: _____

E-mail: _____

Model: _____

Serial Number: _____

Purchased at: _____

Purchase Date: _____

MANUALLY LOADING YOUR ZUBIN CROSSBOW WITH A SABOT

1. Place Zubin-brand sabot (nock side down) loaded with lead shots, minimum loaded weight 360 grains, part way in the barrel while holding muzzle skyward. Before releasing the sabot into the barrel, remove the O-ring then make sure sabot rests securely against bowstring before firing. (This is important! Unless the sabot rests securely against the string a dry-fire condition can be created that could cause injury to you or damage your Zubin crossbow.)

2. Your Zubin crossbow is now loaded and must be handled with extreme caution. ****Remember, never point the Zubin crossbow at anything you do not intend to shoot.**



ARROW/SABOT CONFIGURATION

Your new Zubin crossbow is designed to use either 22" long .346 inch diameter carbon arrows with flat nocks or Zubin sabots.

**** We recommend using #7 lead shots or smaller or size #2 1/2 lead buck shots for reloading the sabot.****



SIGHTING YOUR CROSSBOW

1. We recommend that you take your first shots at a close range (about 10 yards). Be sure you have a suitable target and a reliable backstop.

2. After your Zubin crossbow is pointed down range, you must take the safety off. Your Zubin crossbow is now ready to fire.

NOTE: Be sure that your fingers and thumb are clear of the bowstring travel to prevent injury.

3. At this point, shoot several arrows and determine point of impact. You are now ready to make sight adjustments.

MAINTENANCE

1. Lubrication of your trigger mechanism is necessary, especially if you are using your Zubin crossbow in wet conditions. Use a light lubricant, applying through the safety slot and into the trigger area.

2. Periodically inspect all fasteners to be sure that they have not vibrated loose.

ZUBIN CROSSBOW WARRANTY

To activate the Warranty* on your new Zubin crossbow, You must register online at: zubinoutdoors.com

Zubin Limited Warranty*

LIMITED LIFE TIME WARRANTY. YOUR ZUBIN CROSSBOW IS WARRANTED AGAINST DEFECTS IN MATERIALS AND WORKMANSHIP TO THE ORIGINAL, REGISTERED OWNER

**Limbs are warranted for 5 years under normal usage.

NOTICE The warranty will be void if any of the following occur:

1. Failure to follow the safety and operating instructions in the owner's manual;
2. Zubin crossbow is not registered by original purchaser;
3. The Zubin crossbow or any of its parts or accessories are altered from their original state;
4. Damage is caused by abuse or neglect;
5. Damage is caused by dry firing or by using underweight bolts/arrows/sabots.

(Lighter than recommended in the Owner's Manual)

DISCLAIMER OF LIABILITY

BY ACCEPTING THIS ZUBIN OUTDOORS PRODUCT, THE BUYER AGREES TO HOLD HARMLESS ZUBIN OUTDOORS LLC AND ALL ASSOCIATED PARTIES FROM LIABILITY FOR ANY DAMAGE TO PERSONS OR PROPERTY WHICH MAY RESULT, FOR ANY REASON, BY USE OF THESE PRODUCTS.

Zubin Outdoors LLC
www.zubinoutdoors.com • info@zubinoutdoors.com
470.545.2352
1324 Union Hill Rd., Alpharetta, GA 30004

MANUALLY LOADING YOUR ZUBIN CROSSBOW WITH AN ARROW/BOLT

1. Place your foot completely through the stirrup and use crossbow cocking rope to cock the Zubin crossbow as shown in photo. **Note: be sure to insert your foot far enough into the stirrup so that the Zubin crossbow cannot slip off your foot when cocking, as this can cause serious harm to you.**
2. After the string is drawn back, relax the tension slightly to be sure that the string is held securely by the string latch. If the string is not held securely, pull back again until you hear the click in the trigger housing.
3. Place proper arrow in the barrel, (22 inch with flat nock .346 inch diameter carbon arrows or Zubin sabots) holding the muzzle of the barrel up. Slide the bolt towards the trigger assembly until the nock touches the string.
4. Your Zubin crossbow is now loaded and must be handled with extreme caution. **Do not point the Zubin crossbow at anything you do not intend to shoot.**

